


Scorepad Quick Guide (VJBL) - Scoretable

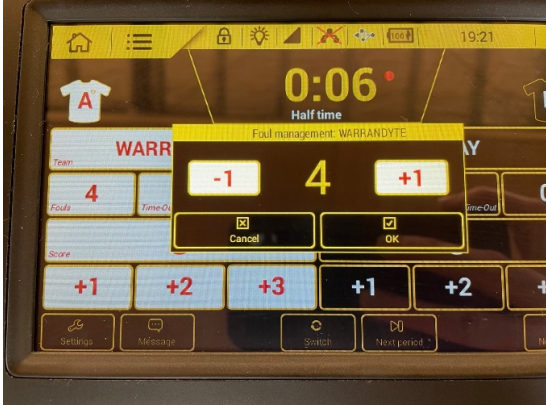


- Pre-game start clock: 5 minutes
- Preset: Game is set to four 10-minute quarters, with 2-minute half time and two 1-minute inter periods between the quarters.
- Each period (e.g. pre-game, periods 1/4, 2/4, half time and periods 3/4 and 4/4) must be manually activated using the 'START' (yellow button).
- Team fouls re-set automatically at the start of each quarter/period.

Start the timer	Press ' START ' (yellow button)
Stop the timer	Press ' STOP ' (yellow button)
Add points	Press screen: +1, +2, +3 To manually change points, press screen 'Points', and adjust on screen.
Add foul:	Press screen: Fouls To manually change points, press screen 'Fouls', and adjust on screen.
Foul / point correction	Press screen (<i>Fouls</i> or <i>Score</i>) and adjust manually via display box. 


Time-outs

1. Press 'STOP' (yellow button)
2. Press screen: **Timeout**
3. Press 'START' (green button) (see below)
Circle on screen (foul) will flash as time counts down.
At end of 1-minute, buzzer will sound.
4. Press 'START' (yellow button) to resume main clock.

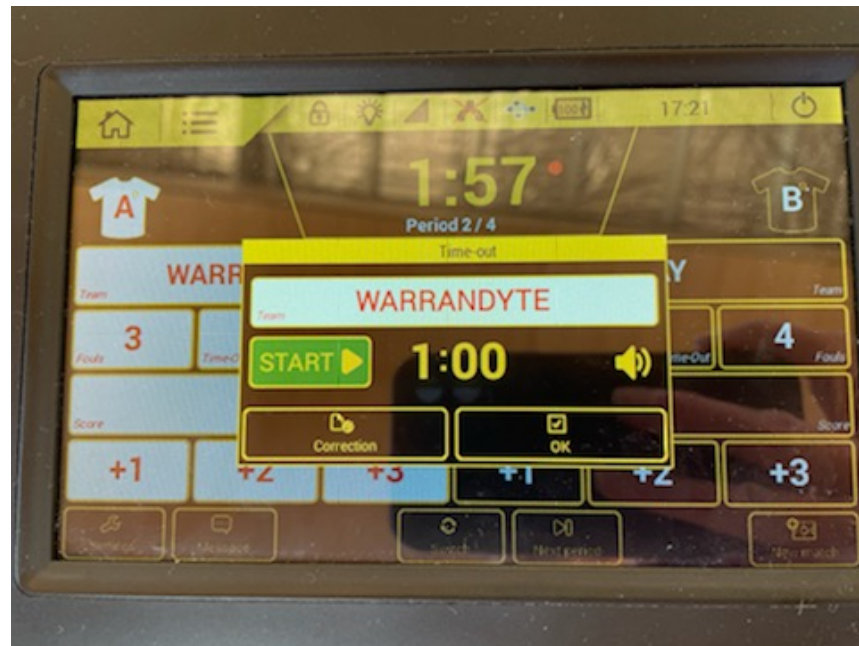

NB. A solid round dot will appear in the time-out screen for the relevant team.

Scorepad Quick Guide (VJBL) – Shot Clock

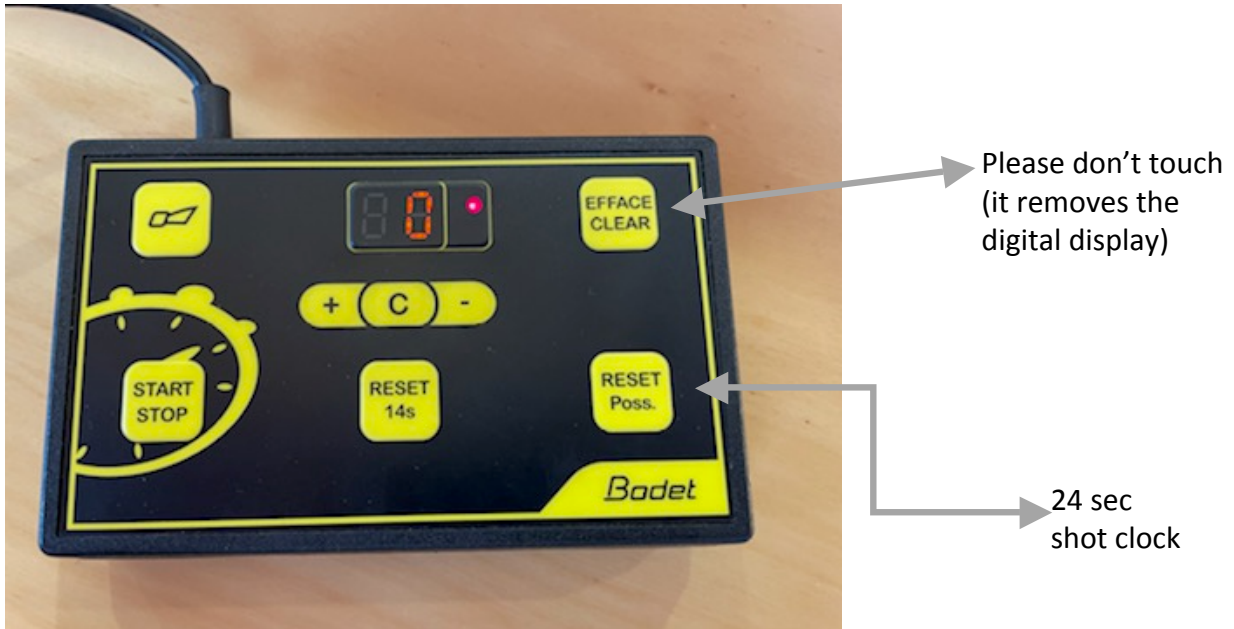

Setting 24s shot clock	To set 24s shot clock: <ul style="list-style-type: none"> • Press 'RESET Poss.' to set/reset the 24 second shot clock. • Press 'START/STOP' (yellow button)
Re-set shot clock (on rebounds etc)	<ul style="list-style-type: none"> • Press 'RESET Poss.'
Pausing shot clock	<ul style="list-style-type: none"> • Press 'START/STOP' (yellow button)